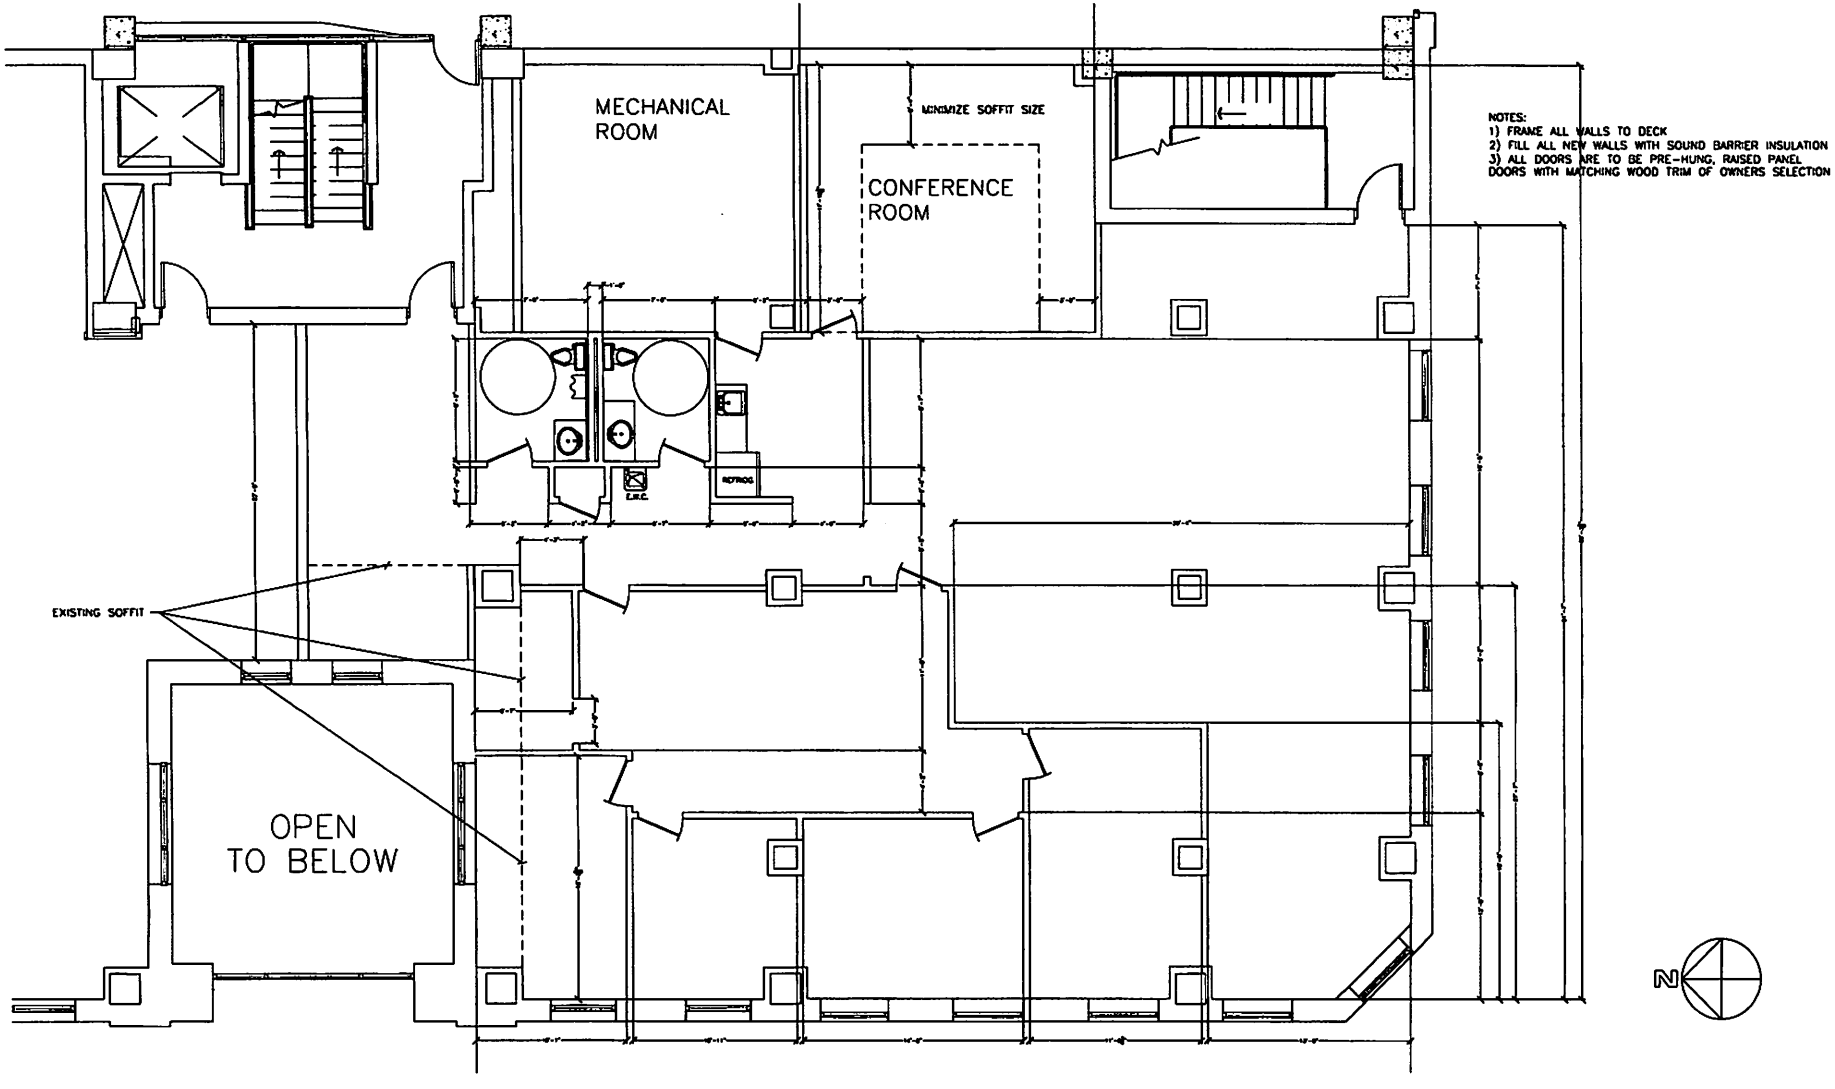

MECHANICAL ROOM
MINIMIZE SOFFIT SIZE
CONFERENCE ROOM
NOTES:
1) FRAME ALL WALLS TO DECK
2) FILL ALL NEW WALLS WITH SOUND BARRIER INSULATION
3) ALL DOORS ARE TO BE PRE-HUNG, RAISED PANEL DOORS WITH MATCHING WOOD TRIM OF OWNERS SELECTION
EXISTING SOFFIT
OPEN TO BELOW
N